BOBINE 5000 Wh - 4000 W

Features: Folding handlebar Battery disconnector Emergency stop Solar panel socket Control screens and charge level AC differential switch DC circuit braker POWERBANK Lifting handle OUTPUT (230V 50Hz) Start button INPUT (Charging socket) Battery level 3 000 W 5 000 Wh **RESET** button Inflatable wheel Grounding

Use:

<u>Only a competent and authorized person can use this device</u>
<u>Ground the device before use</u>

Powering your equipment:

- 1. Switch ON the PowerBank (Stainless steel push button)
- 2. Wait 5s for the white LED of the push button to light up (presence of 230V)
- 3. Monitor the remaining usage time on the screens

Power off in the reverse order

Charging the PowerBank

- Connect the charging cable (IN) in a 230V AC outlet
- Or, connect the solar panels using the Anderson adapter (red socket).
- Power off = unplug, standby after 60s

Restrictions:

- > Device generating an electric current in a private network, under the responsibility of the user.
- Isolated neutral system (Ground the device before use)
- Do not charge and discharge the Powerbank at the same time with an output power greater than 1000 W (risk of overloading the power supply socket)
- Do not use the PowerBank in temperatures above 45°C (113 °F) and below 0°C (32 °F)
- > Do not connect equipment with a cumulative power greater than 4000W
- > Do not expose to water, do not cover (except with the Pess Bobine rain cover), do not leave in direct sunlight
- > Never open the PowerBank (electrical risk)
- \succ In the event of a breakdown, contact the afdter-sales service of PESS Energy

Emergency stop \rightarrow Disconnect the battery (yellow lever)



User manual

<u>Contact</u> : www.pessenergy.com contact®pessenergy.com

